

2 lamp food warmer bridge

 
273906

GEBRUIKSAANWIJZING
USER INSTRUCTIONS
GEBRAUCHSANWEISUNG
MODE D'EMPLOI
INSTRUKCJA OBSŁUGI
MANUAL DE UTILIZARE




Infrarood warmhoudbrug
2 lamp food warmer bridge
Thekenaufsatz mit Infrarotwärmelampen
Portique chauffe-plat à infrarouges
Lampa do podgrzewania potraw
Suport cu 2 lampi pentru incalzit mancare

*Alvorens de apparatuur in gebruik te nemen dient u deze gebruiksaanwijzing aandachtig te lezen
You should read these user instructions carefully before using the appliance
Bevor Sie das Gerät in Betrieb nehmen, sollten Sie diese Gebrauchsanweisung aufmerksam lesen
Lisez attentivement ce mode d'emploi avant d'utiliser l'appareil
Przed uruchomieniem urządzenia należy koniecznie dokładnie przeczytać niniejszą instrukcję obsługi
Citiți cu atenție prezentul manual de utilizare înainte de folosirea aparatului*




Please read and keep
these instructions

 Bewaar deze handleiding bij het apparaat.
Keep these instructions with the appliance.
Diese Gebrauchsanweisung bitte beim Gerät aufbewahren.
Gardez ces instructions avec cet appareil.
Zachowaj instrukcję urządzenia.
Păstrați manualul de utilizare alături de aparat.

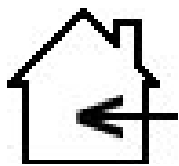

 Alleen voor gebruik binnenshuis.
For indoor use only.
Nur zur Verwendung im Innenbereich.
Pour l'usage à l'intérieur seulement.
Do użytku wewnątrz pomieszczeń.
Numai pentru uz casnic.

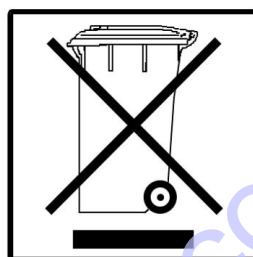

www.food-service.com.ua

English

Dear Customer,

Thank you for purchasing this Hendi appliance. Please read these user instructions carefully before connecting the appliance in order to prevent damage due to incorrect use. Read the safety instructions in particular very carefully.

Safety Regulations


- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose it was intended and designed for. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician. **Not following these instructions could give rise to life-threatening situations.**
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not touch the plug with wet or damp hands.
- Regularly check the plug and cord for any damage. Should the plug or cord be damaged have it/them repaired by a certified repair company.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
- Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Make sure that no one can accidentally pull the cord (or extension cord) loose or trip over the cord.
- Always keep an eye on the appliance when in use.
- Children do not understand that incorrect use of electrical appliances can be dangerous. Therefore, never let children use electrical appliances without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- **Warning!** As long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- Do not use any extra devices that are not supplied along with the appliance.
- Only connect the appliance to an electrical outlet with the Voltage and frequency mentioned on the appliance label.
- Avoid overloading.
- Turn off the appliance after use by removing the plug from the socket.
- Always remove the plug from the socket when filling or cleaning the appliance.
- The electrical installation must comply with the applicable national and local regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Special safety instructions

- Do not place the appliance near combustible objects.
- ATTENTION! This appliance is only suitable for use with R40 or BR40 types of incandescent light bulbs (to be ordered as spare part: article number 919200).
- Do not install light bulbs with a power level greater than 250 Watts.

Preparation for first use

- Check to make sure the appliance is undamaged. In case of any damage, immediately contact your supplier and do **NOT** use the appliance.
- Remove all packaging material and protection film (if applicable).
- Clean the appliance as explained below at the cleaning and maintenance topic.
- Position the appliance in such a way that the plug is accessible at all times.
- Place the appliance on a level and steady surface, unless mentioned otherwise.
- Place the support arm into the stand.
- Set the height of the support arm and insert the screw to lock the arm in place.
- Tighten the mounted light bulbs well.
- The new lamps will process fumes for about 3 till 4 hours (smoke & odor).

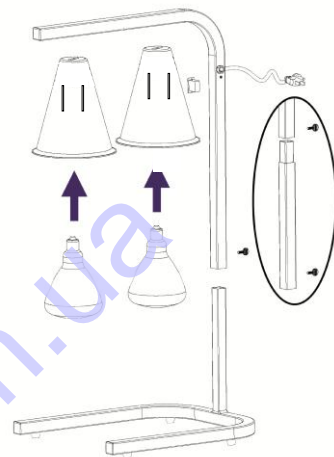

Note: GN container not included! Suitable for GN 1/1 container.

Usage

- Insert the plug into a grounded socket.
ATTENTION! There is a chance for electrical shocks when not using a grounded socket.
- Turn on the appliance using the switch.
- Place the food in a pan or equivalent directly under the light bulbs for the best results.
- If you don't use the appliance anymore the appliance can be turned off using the switch.
- If the appliance is not being used for a longer period of time, remove the plug from the socket.
- ATTENTION! The light bulbs and other parts of the appliance can get hot while operating the appliance.
- ATTENTION! Allow the appliance to cool down before touching it.

Cleaning and maintenance

- Always remove the plug from the socket before cleaning the appliance.
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- Never use aggressive cleaning agents or abrasives. Do not use any sharp or pointed objects. Do not use petrol or solvents! Clean with a damp cloth and detergent if necessary. Do not use abrasive materials.
- Turn off the appliance before replacing any light bulbs.

Faults

Storing	Possible cause	Possible solution
The appliance does not work	The plug is not plugged (correctly) into the electrical outlet.	Check the plug
	Switch is off	Turn the switch on
	Light bulbs are loose or are defective	Tighten or replace the light bulb

In case of any doubt, always contact your supplier!

Technical data

Supply voltage	230-240 V a.c./50 Hz
Power	500 W

Warranty

Any defect affecting the functionality of the appliance that becomes apparent within one year after purchase will be corrected by free repair or replacement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and when it was bought and include proof of purchase (f.e. receipt).

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

Discarding & Environment

At the end of the life of the appliance, please dispose of the appliance according to the regulations and guidelines applicable at the time.

Throw packing materials like plastic and boxes in the appropriate containers.